



# The Shield™ Splash Guard



Apollo's Clinic Sink Splash Guard, The Shield™, is the most efficient and economical product on the market to protect your staff from exposure to spattering waste that harbors pathogens. When used as part of a PPE system for infectious waste handling, it provides an effective splash barrier over most of the body.

The Shield™ Splash Guard simply affixes to on the front edge of all makes of service sinks. It may be cleaned and disinfected in place and is readily removed for service as needed. The splash guard flexes for staff comfort and is transparent for good visibility. The Shield is extremely sturdy and typically provides years of use.

Part Number	Description	Price
600-040	Universal Shield™ Splash Guard	\$241.00
(tax and shipping charges not included in price)		

Please visit our website at [www.apollobath.com/protective-splash-guard](http://www.apollobath.com/protective-splash-guard), email [apollosales@apollobath.com](mailto:apollosales@apollobath.com) or call (715)247-5625 with your order.

## THE SHIELD™ SPLASH GUARD LIMITED WARRANTY

This warranty: (i) extends only to, and is enforceable only by, the original purchaser (for purchases either directly from Apollo Corp. ("APOLLO") or through an APOLLO authorized reseller) of the Shield™ Splash Guard ("SHIELD"), (ii) is effective as to all component parts found defective due to faulty material and/or manufacturing workmanship, for the first 90 days following the date of shipment from APOLLO or authorized reseller. FAILURE OF THE PURCHASER TO PRECISELY FOLLOW ALL INSTALLATION INSTRUCTIONS OR MISUSE THE SHIELD SHALL VOID THIS WARRANTY. Subject to the preceding sentences, APOLLO will repair or replace, at its option, any component part of the SHIELD that is defective in the use for which the SHIELD is designed and intended. Installation labor for replacing parts shall be provided, and paid for, by the purchaser. In the event of replacement, the replacement part will continue the warranty of the original replaced part for the first 90 days following warranty shipment. A copy of the original invoice and serial number must accompany any warranty claim for the SHIELD. All defective component parts must be immediately returned to the APOLLO factory with related shipping costs prepaid by the purchaser. Liability in all events is limited to the purchase price paid, and liability under the aforesaid warranty is limited to the repair or replacement of parts which prove defective under normal use. THIS WARRANTY IS MADE IN LIEU OF ALL WARRANTIES OTHER THAN WARRANTY IMPLIED ACCORDING TO APPLICABLE STATE LAW. UNDER NO CIRCUMSTANCES SHALL APOLLO CORPORATION BE OBLIGATED FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES OR INJURIES.

## WARNING!

The Shield™ splash guard is designed to flex forward as the user bends toward the service sink. However, bending it backwards (away from the inside of sink) will cause damage to the guard and/or the mounting adhesive. This damage is not covered by warranty.

Apollo cannot accept returns of Shields that have been used or placed on a service sink due to the possibility of contamination. Should you need to return this product, it must be unused and not have been installed. Please call (715) 247- 5625 for return authorization.



PHONE: (715) 247-5625  
FAX: (715) 247-3424

EMAIL: [apollosales@apollobath.com](mailto:apollosales@apollobath.com)  
WEBSITE: [www.apollobath.com](http://www.apollobath.com)

Somerset, WI






# The Shield™ Splash Guard Specifications

Apollo's Clinic Sink Splash Guard, The Shield™, is the most efficient and economical product on the market to protect your staff from exposure to spattering waste that harbors pathogens. When used as part of a PPE system for infectious waste handling, it provides an effective splash barrier over most of the body.

The Shield™ Splash Guard simply affixes to on the front edge of all makes of service sinks. New installation may be completed in minutes and it is readily removed for service as needed. It may be cleaned and disinfected in place. The splash guard flexes for staff comfort and is transparent for good visibility. The Shield is extremely sturdy and typically provides years of rigorous use.

**Cleaning:** Any non-abrasive disinfectant and/or cleaner. We recommend Apollo's Turbo Clean™ Pre-Disinfectant Detergent and Apollo's Cid-A-L™ II Quaternary Disinfectant. They are non-abrasive and will not scratch surfaces.

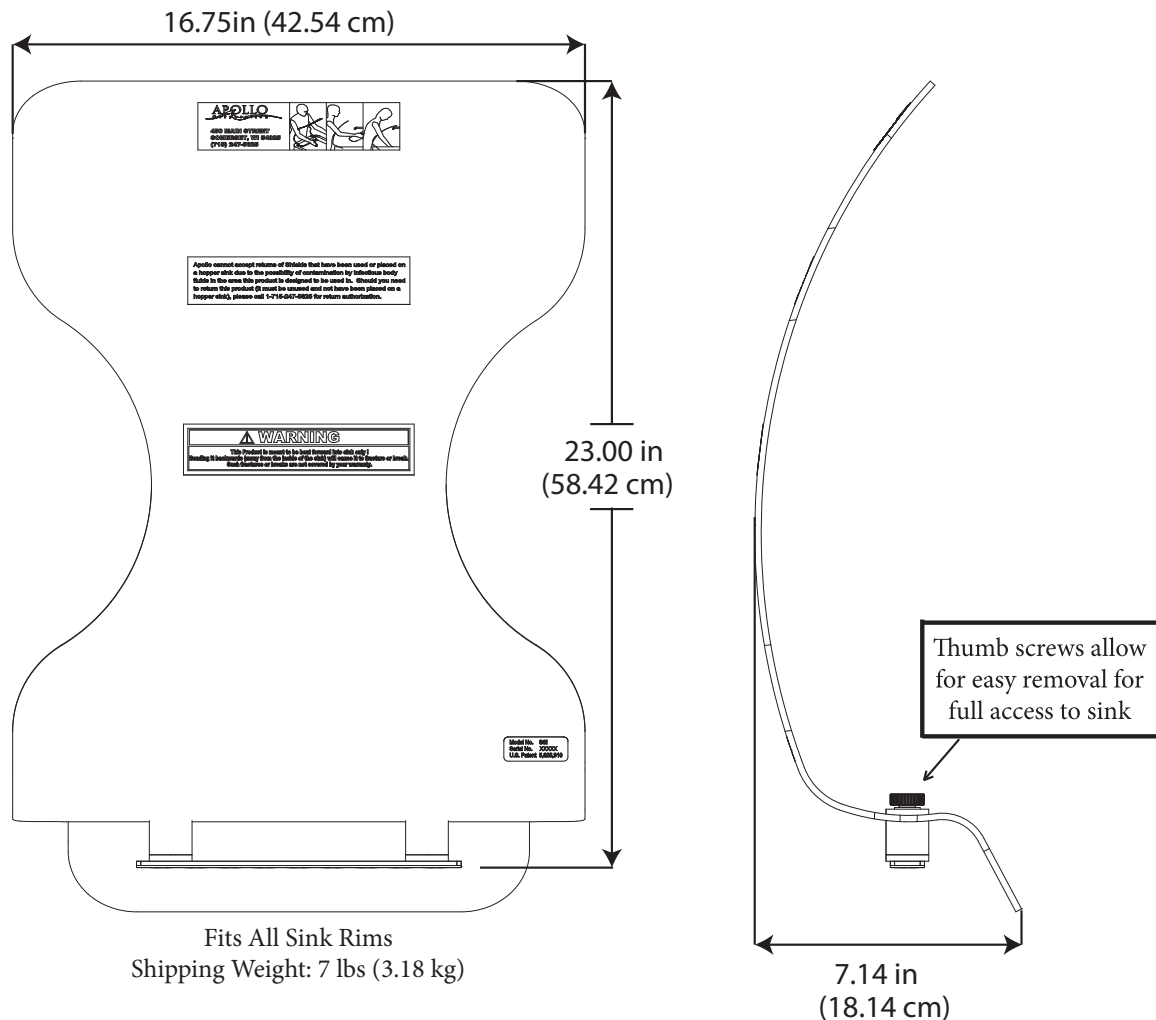

## WARNING!

The Shield™ splash guard is designed to flex forward as the user bends toward the service sink. However, bending it backwards (away from the inside of sink) will cause damage to the guard and/or the mounting adhesive. This damage is not covered by warranty.

# The Shield™ Splash Guard

## Assembly Instructions

Failure to follow these directions **PRECISELY** will result in mounting failure. Contact Apollo Technical Service if assistance is required.

Item	Part #	Description (Quantity)
1	340407	Shield
2	N/A	Thumb Screw 5/16-18 (2)
3	N/A	Metal Washer 5/16" (2)
4	N/A	Rubber Washer (4)
5	350257	Rubber Mount (2)
6	N/A	Metal Bracket w/adhesive
	600053	Bracket Replacement/Relocation Kit (Items 2, 3, 4, 5, 6)

### 1. Prepare Sink Surface for Bonding Bracket

- All components and sink surface must be allowed to acclimate to room temperature (65 - 80°F) before installation.
- Clean mounting area of sink rim surface **THOROUGHLY** with an appropriate cleaner and scouring pad remove all discoloring and residue. Rinse **THOROUGHLY** and allow to **DRY COMPLETELY**.
- Use the IPA single use surface prep pad to remove any remaining soap and residue from mounting area. Allow area to **DRY COMPLETELY**.
- Apply 3M primer 94 to top of sink rim where bracket will be attached. Crush dot on ampule and use applicator tip to apply a thin and uniform coat across area where bracket will be installed. Allow primer to **DRY COMPLETELY** (about 10 minutes).

### 2. Assemble Metal Bracket


- Install rubber washers (#4) onto threaded studs of metal bracket (#6).
- Thread rubber mount (#5) on each stud by hand until tight.

### 3. Bond Metal Bracket to Sink Rim

- Carefully remove protective film from metal bracket (#6). **DO NOT TOUCH** adhesive strip.
- Install metal bracket (#6) on sink rim centered left to right. Wide Rim Sinks Only: Install metal bracket (#6) 1.25 in (3.175 cm) from inside edge. Refer to diagram.
- APPLY EVEN PRESSURE** over all of metal bracket (#6) to achieve a good overall bond. Allow adhesive to cure for a **MINIMUM OF 8 HOURS** before proceeding to Step 4.

### 4. Assemble Thumb Screws

- Install metal washer (#3) onto threaded stud of each thumb screw (#2).
- Install rubber washer (#4) onto threaded stud of each thumb screw (#2).
- Push the rubber washers (#4) all the way down stud, tight against knob.

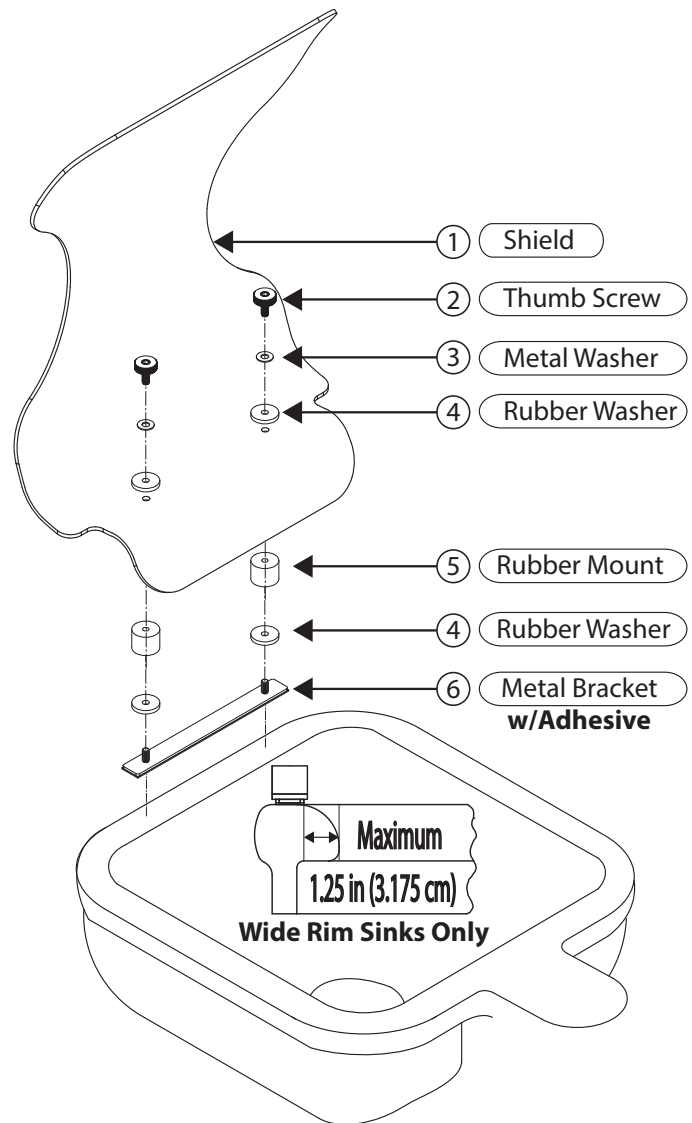

### 5. Install Shield onto Metal Bracket

- Place the shield (#1) onto rubber mounts (#5) of metal bracket (#6).
- Thread each thumb screw (#2) thru the holes in the shield (#1) into each rubber mount (#5).
- Secure thumb screws (#2) by hand until tight.

### 6. Train All Personnel on Use and Removal of Splash Guard

- Remember to include janitorial staff on removal of the splash guard using thumb screws.
- The Shield™ splash guard is designed to flex forward as the user bends toward the service sink. However, bending it backwards (away from the inside of sink) will cause damage to the guard and/or the mounting adhesive. **This damage is not covered by warranty.**